



NOTE: Outer ring has very tight tolerance due to holes, be sure you are accurately placing the ring in the correct position. ***Notch is to be positioned at top center.*** Before final placement, open and close gas lid to be sure the gas door has enough space to pivot.