

Spyder F3 Bellerdine Over Web



Elements:

4 Piece Silver Metallic Vinyl cut- Web (Avery A9 EZ-RS)

1 Bellerdine Spider

*** Frunk ONLY kit**

** Install your web pieces following the order below: 1,2,3,4*

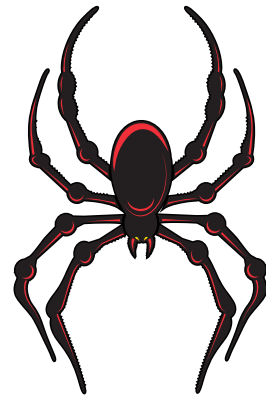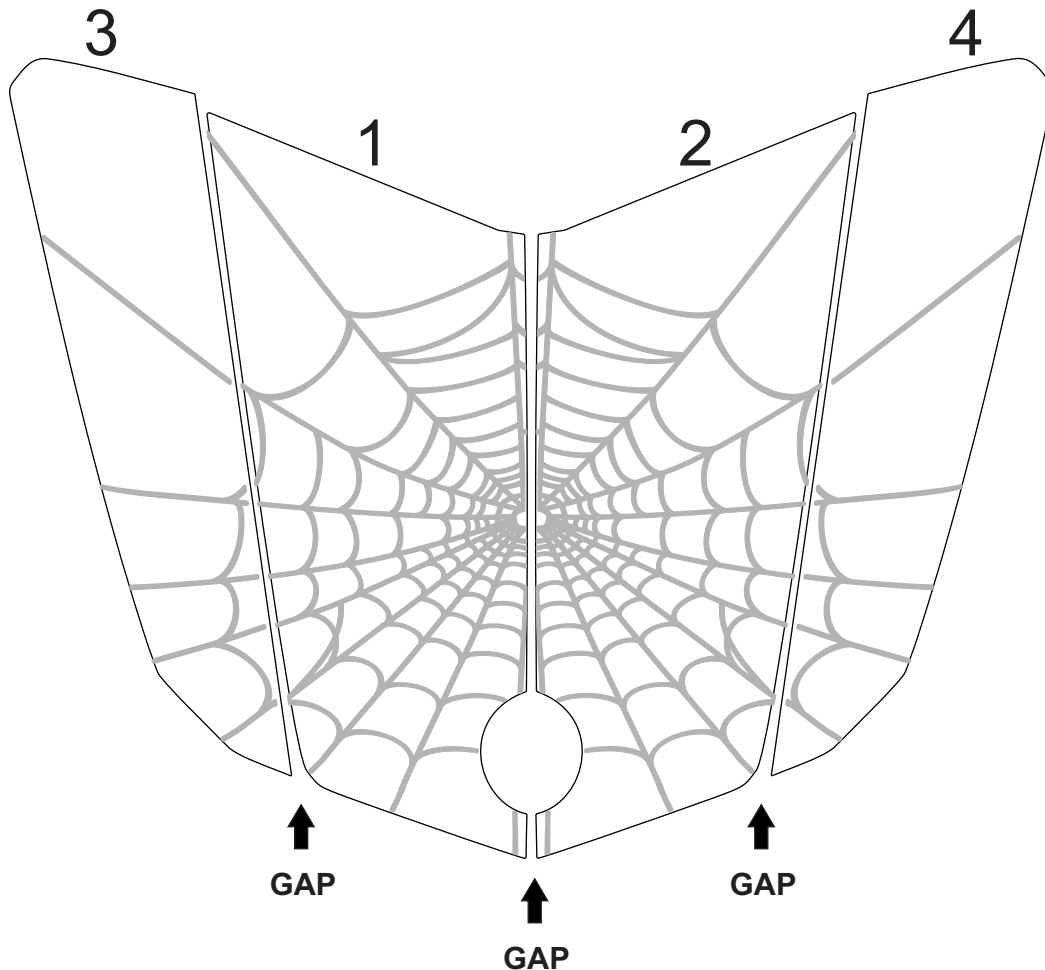

NOTE: To simplify application process, the F3 Bellerdine 4 piece frunk web was designed to have a small gap between the 4 pieces of the web. (see illustration)

The web **will not connect** in all sections.

Place the web on first then put the spider over top of the web.