




Can-am F3 Gas Filler kit Schematic / Application Instructions

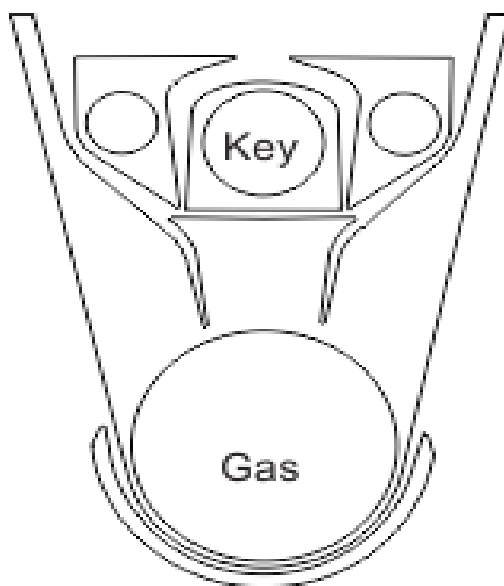

Note: Application of this product is not recommended if you have applied Armor All or other silicone based products to the dash.

1. Using paper towel, wipe application surface with 70% alcohol **multiple times** letting the surface dry between cleaning. (Do not use shop towels)
2. **Using masking tape, test the surface. If tape sticks to surface you are ready to install. If tape does not stick or slides you must go back and repeat step 1 multiple times. Failure to do so results in the 3M adhesive not sticking to the surface and voids any warranty with this dash kit. Your dash kit will fall off!**
3. If (optional) 3M adhesion promoter has been provided, open packet & wipe over the surface area where the kit will be installed. Wipe **only** in the application area.
4. Exposing the adhesive, lightly place each piece in the center of the intended panel. You will be able to reposition the part if you lightly tack the part to the dash. Once in place, evenly apply pressure to the part by pushing it down.
5. Using a hair dryer, warm the parts and apply pressure to each piece. Be careful not to overheat them as you warm.

Care: You can use a soft cloth to wipe over the dash or light dish soap and water. Do not wax or use abrasive cleaners on the dash kit.

Recommended application temp 60 degrees or above. Do not apply in direct sunlight.

Scan to
watch general dash
install video



Installation Questions? Call 814-450-1923