


3 People recommended for this application.


## Step 1

Hover, Align & gently Set into position

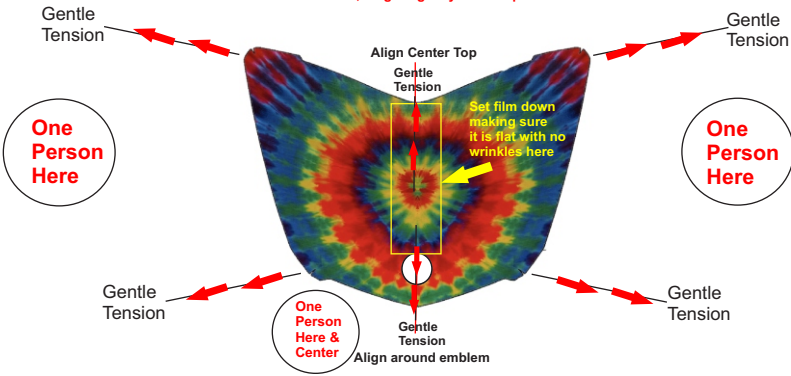


## Step 2

Once film is set tightly on the surface in the center of the frunk, see steps 1, 2

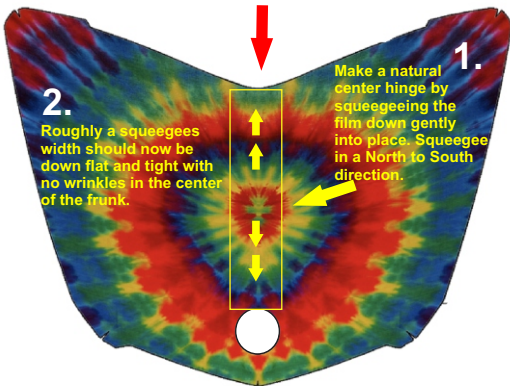

## Step 3

Now you have a Left side and Right side with the center (in yellow) applied on the frunk

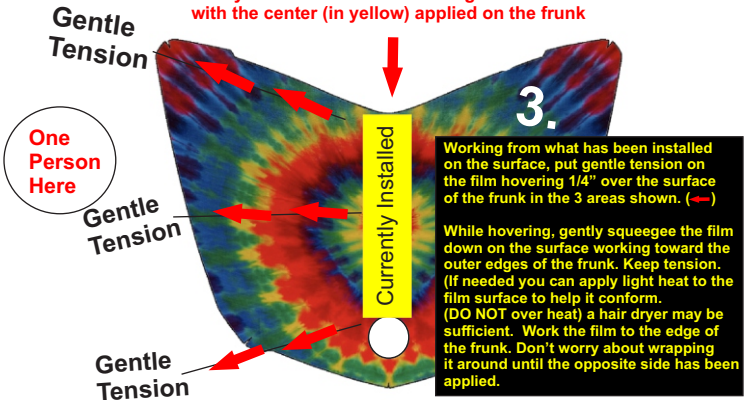

## Step 4

Now you have a Left side applied from the center. Repeat same technique for the Right side.

